

V230 - ☐ ☐ ☐ ☐ ☐ ☐ - ☐

Feeder and Motor Manager

Nominal phase current / activation voltage for DI19-20

3 ☐ 1A/5A / 2 V

6 ☐ 1A / 5A / 110V ¹

7 ☐ 1A / 5A / 220V ¹

Nominal earth-fault current Io1 & Io2 [A]

C ☐ 1A & 5A

D ☐ 0.2 A & 1 A

Frequency [Hz]

7 ☐ Standard relay

Nominal Supply voltage [V]

A ☐ Power A ☐ - 230 V ☐ 0 ☐ 265Vac/dc ☐

B ☐ Power B 2 V ☐ 1 ☐ 36Vdc ☐

C ☐ Power C ☐ - 230 V ☐ 0 ☐ 265Vac/dc ☐ 1 x BI/BO ☐ 2 x Arc sensor

D ☐ Power D 2 V ☐ 1 ☐ 36Vdc ☐ 1 x BI/BO ☐ 2 x Arc sensor

E ☐ Power E ☐ - 230 V ☐ 0 ☐ 265Vac/dc ☐ DI19 ☐ DI20 ☐ 1 x Arc sensor

F ☐ Power F 2 V ☐ 1 ☐ 36Vdc ☐ DI19 ☐ DI20 ☐ 1 x Arc sensor

Optional hardware

A ☐ None

B ☐ Plastic/Plastic serial fibre interface

C ☐ Profibus interface

D ☐ RS ☐ 5 interface ☐ -wire ☐

E ☐ Glass/Glass serial fibre interface

F ☐ Rx Plastic/Tx Glass serial fibre interface

G ☐ Rx Glass/Tx Plastic serial fibre interface

H ☐ R ☐ 5 10M ☐ ps ethernet interface

M ☐ R ☐ 5 10M ☐ ps ethernet inc ☐ IEC 61 ☐ 50

O ☐ ☐ C 100 M ☐ ps ethernet fibre interface inc ☐ IEC 61 ☐ 50

P ☐ R ☐ 5 100M ☐ ps ethernet interface inc ☐ IEC 61 ☐ 50

R ☐ 2 x ☐ C 100 M ☐ ps ethernet fibre interface inc ☐ IEC 61 ☐ 50

S ☐ 2 x R ☐ 5 100 M ☐ ps ethernet interface inc ☐ IEC 61 ☐ 50

Analog Outputs & firmware

A ☐ None ☐ version 6 firmware ☐

B ☐ ☐ pcs ☐ version 6 firmware ☐

E ☐ None ☐ standard firmware

F ☐ ☐ pcs ☐ standard firmware

HW options

☐ IP30 ☐ default ☐

C ☐ IP30 with conformal coating

I ☐ IP5 ☐

K ☐ IP5 ☐ with conformal coating

NOTE: 1) DI activation voltage selection applies to DI19 - DI20 only